

Technical Specifications

Materials	Steel.
Connections	½" flow and return.
Test pressure	10.5 Bar
Testing authority	EN442
Maximum operating pressure	7 Bar
Maximum working temperature	As to EN442 Δt 50°C
Packaging	Protective wrapping with polystyrene in wooden crate

Terms & Conditions

All products must be inspected once removed from the packaging and The Radiator Company notified within 28 days of delivery of any scratches, blemishes or other damage. The Radiator Company will then replace the radiator.

Imperfect radiators should therefore not be fitted and The Radiator Company will not accept responsibility for replacement of scratched or damaged radiators once they have been fitted. This includes any consequential loss or cost of fitting.

If The Radiator Company are not notified within 28 days of the date on the signed delivery note then it will be deemed that The Radiator Company have fully complied with its obligations and claims will not be considered.

Failure to comply with any of the above may invalidate any claims.

We recommend that after you check the product on delivery that it is stored in its packaging to prevent damage. The Radiator Company cannot accept responsibility for items damaged after delivery.

Guarantees & Liabilities

As we are not the manufacturers of this product we will take all reasonable endeavours to make over to you the benefit of any warranty or guarantee given by the manufacturer, which is usually five years on most of our range. (Copies of specific guarantees for any of our products are available on request).

The guarantees in all cases are subject to the products being installed in accordance with British and or European standards as well as these fitting instructions. The guarantees in all cases are restricted to the free of charge replacement or repair of the failed product only. Our liability will under no circumstances extend beyond the repair or replacement of the product supplied by us. Claims for either labour in replacement or damage to property are not admissible. Any goods that are returned, in the event of a problem, will belong to The Radiator Company.

THE **Radiator** COMPANY

Fitting Instructions Air, Stone, River Honey & Skin



This range of hi-design feature radiators combine practicality with bold scultural styling.

Please read these instructions carefully prior to installation. Failure to do so may invalidate the warranty.

The Radiator Company
TRC House
Units 13 - 14 Charlwoods Road
East Grinstead
West Sussex
RH19 2HU
tel. 08707 302250
www.theradiatorcompany.co.uk

Diagrams of Fine Design Range

Air single



Air double



Stone single



Stone double



River single



River double



Honey single



Honey double



Skin single



Skin double




Pipe Centres

Pipe centres left to right	width of radiator plus valves
Pipe centres from wall	47mm
Depth from wall	Air = 86mm
	Stone = 105mm
	River = 90mm
	Honey = 125mm
	Skin = 105mm

1 Unpack & Inspect

The Radiator Company prides itself on selecting products from manufacturers who exercise tight quality control measures. We only select models with excellent standards of welding and brazing, as well as high quality finishes. All of our products are well packaged and should reach you in perfect condition. Just in case however, we offer a minimum 5-year no quibble guarantee for all radiators and towel rails.

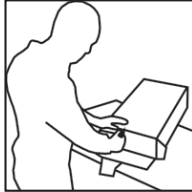

Please carefully unpack and inspect this radiator and all fittings. The Radiator Company must be notified of any shortages or damage within 28 days of delivery. For further information please see terms and conditions on back page.

2 Contents

You should have:

- 1 Radiator
- 4 Wall brackets (6 for Honey)
- 8 Plastic sleeves (12 for Honey)
- 1 Air vent
- 1 Blanking Plug
- 4 Lifting handles for Honey only

You will need:

- Tape measure
- Electric drill and bits
- Spirit level


3 Mark Bracket Positions

We recommend you place the two (three for Honey) top brackets on the radiator prior to installation and measure the horizontal distance between the screw holes. Transfer this dimension to the wall then level and mark these top brackets.

In order to accurately mark the bottom bracket fixing positions we recommend you fix and level the top brackets then hang the radiator, ensuring it is vertically level and manually hold the bottom brackets in position while marking.

4 Fix Brackets

Using a suitable drill bit, screws and plugs, fix the brackets and level with a spirit level.

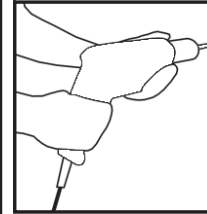

PLEASE NOTE :


It is essential that all brackets are level to ensure a vertical alignment for connecting the pipework.

5 Hang Radiator

With the brackets firmly fixed and level and the plastic sleeves fitted, the radiator is lowered directly onto the brackets.

To hang the Honey, the four lifting handles are temporarily screwed into both ends of the collectors to enable an assistant on each corner to hang the radiator.

6 Fitting Diverter & Commission

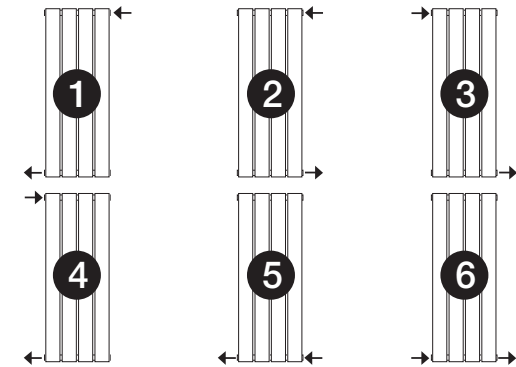

For connection options 1, 2, 3 & 4 the radiator can be commissioned as supplied without the need for the diverter to be installed.

For connection options 5 or 6 you will need to insert the diverter into the collector. The diverter is the threaded nut with a 10mm hex slot contained in the fittings pack. The diverter position is indicated by a coloured label (please see diagram below).



Open collector as supplied



Insert diverter to close collector