

## Technical Specifications

<b>Materials</b>	Steel.
<b>Connections</b>	½" flow and return.
<b>Testing authority</b>	EN442
<b>Packaging</b>	Carboard protection and shrink wrapped in polythene.

## Terms & Conditions

All products must be inspected once removed from the packaging and The Radiator Company notified within 28 days of delivery of any scratches, blemishes or other damage. The Radiator Company will then replace the radiator.

Imperfect radiators should therefore not be fitted and The Radiator Company will not accept responsibility for replacement of scratched or damaged radiators once they have been fitted. This includes any consequential loss or cost of fitting.

If The Radiator Company are not notified within 28 days of the date on the signed delivery note then it will be deemed that The Radiator Company have fully complied with its obligations and claims will not be considered.

Failure to comply with any of the above may invalidate any claims.

We recommend that after you check the product on delivery that it is stored in its packaging to prevent damage. The Radiator Company cannot accept responsibility for items damaged after delivery.

## Guarantees & Liabilities

As we are not the manufacturers of this product we will take all reasonable endeavours to make over to you the benefit of any warranty or guarantee given by the manufacturer, which is usually five years on most of our range. (Copies of specific guarantees for any of our products are available on request).

The guarantees in all cases are subject to the products being installed in accordance with British and or European standards as well as these fitting instructions. The guarantees in all cases are restricted to the free of charge replacement or repair of the failed product only. Our liability will under no circumstances extend beyond the repair or replacement of the product supplied by us. Claims for either labour in replacement or damage to property are not admissible. Any goods that are returned, in the event of a problem, will belong to The Radiator Company.



## Fitting Instructions *Tuboni*



 
 
*The Tuboni combines spectacular simplicity with modern design. The continuous steel loop is totally unique and will make a stunning centre piece in any room.*

Please read these instructions carefully prior to installation. Failure to do so may invalidate the warranty.


**The Radiator Company**  
TRC House  
Units 13 - 14 Charlwoods Road  
East Grinstead  
West Sussex  
RH19 2HU  
tel. 08707 302250  
[www.theradiatorcompany.co.uk](http://www.theradiatorcompany.co.uk)

## Diagrams of Tuboni

Horizontal

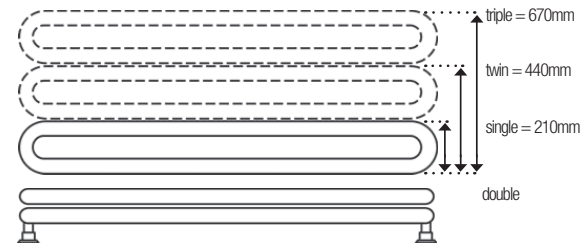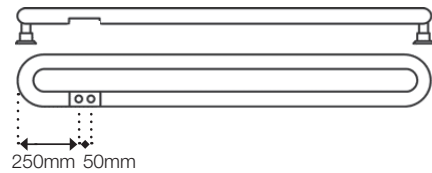

Vertical

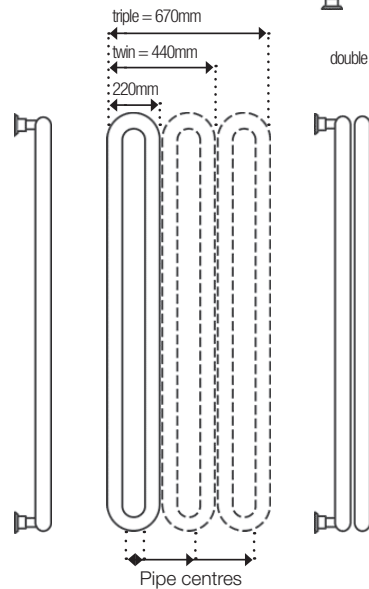 


## Pipe Centres

Horizontal		Vertical	
Pipe centres left to right	= 50mm	Pipe centres left to right	single = 50mm
Pipe centres from wall	= 70mm		twin = 222mm
Depth from wall	single = 140mm		triple = 444mm
	twin = 140mm		double = 220mm
	triple = 140mm	Pipe centres from wall	= 110mm
	double = 220mm	Depth from wall	single = 140mm
			twin = 140mm
			triple = 140mm
			double = 220mm

## 1 Unpack & Inspect

 The Radiator Company prides itself on selecting products from manufacturers who exercise tight quality control measures. We only select models with excellent standards of welding and brazing, as well as high quality finishes. All of our products are well packaged and should reach you in perfect condition. Just in case however, we offer a minimum 5-year no quibble guarantee for all radiators and towel rails.

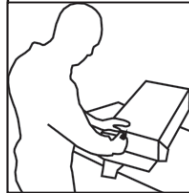

Please carefully unpack and inspect this radiator and all fittings. The Radiator Company must be notified of any shortages or damage within 28 days of delivery. For further information please see terms and conditions on back page.

## 2 Contents

You should have:

- 1 Radiator
- 2 Wall brackets, 4 for twin & triple models
- 1 Air vent

You will need:

- Tape measure
- Electric drill and bits
- Spirit level

 
## 3 Mark Bracket Positions

To mark bracket positions hold the radiator against the wall and mark the top bracket fixing position (or two fixing positions if fitting twin or triple).

The bottom brackets are marked when the radiator is hung.

## 4 Fix Brackets

Using a suitable drill bit, screws and plugs, fix the brackets and level with a spirit level.

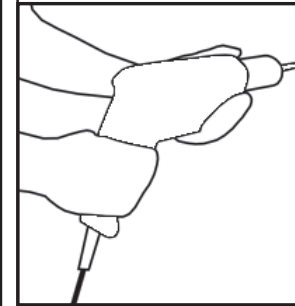

### PLEASE NOTE :

It is essential that all brackets are level to ensure a vertical alignment for connecting the pipework.

## 5 Hang Radiator & Commission

With the brackets firmly fixed and level the radiator is simply pushed into the sleeves and securely fastened by all three grub screws in each bracket.