

# Transit Packing Assembly instructions

## Electric Heating Element


### Before you start

Make sure that you have the right tools to hand, plenty of space and clean dry area for assembly

**Warning: Because of extra danger presented by the presence of water in a bathroom or kitchen the BS approved IE Spur outlet (and towel radiator) must be sited so that it is not possible to touch either when using the basin, shower or bath (refer to BS7671 Wiring Regulations 16<sup>th</sup> Edition).**

### 'Electric Only' Heating Element Installation

1. The element must be fitted before mounting the towel radiator onto the wall
2. Remove 1 transit plugs from the bottom of the towel radiator making sure the rail is upright and sturdy.
3. Insert the electric heating element (A) into the chosen side of the towel radiator and tighten it into place using a 22mm spanner.
4. Slide the cover over the element cable and push firmly to secure on bottom of the element.
5. Follow towel radiator fitting instructions for securing to wall.
6. Connect the element to the mains power using BS IE Spur socket. If in doubt contact a qualified electrician.
7. Switch on the socket to heat the towel radiator. When the operating temperature has been reached, purge excess air from the towel radiator using the air vent.

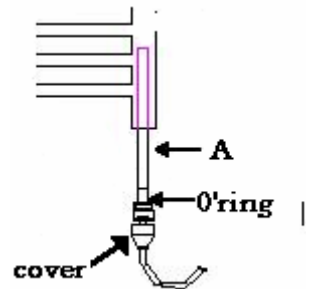

Many thanks for your purchase from

[WWW.WARMUP.ME.UK](http://WWW.WARMUP.ME.UK)

From the managing director

Peter Clayton